


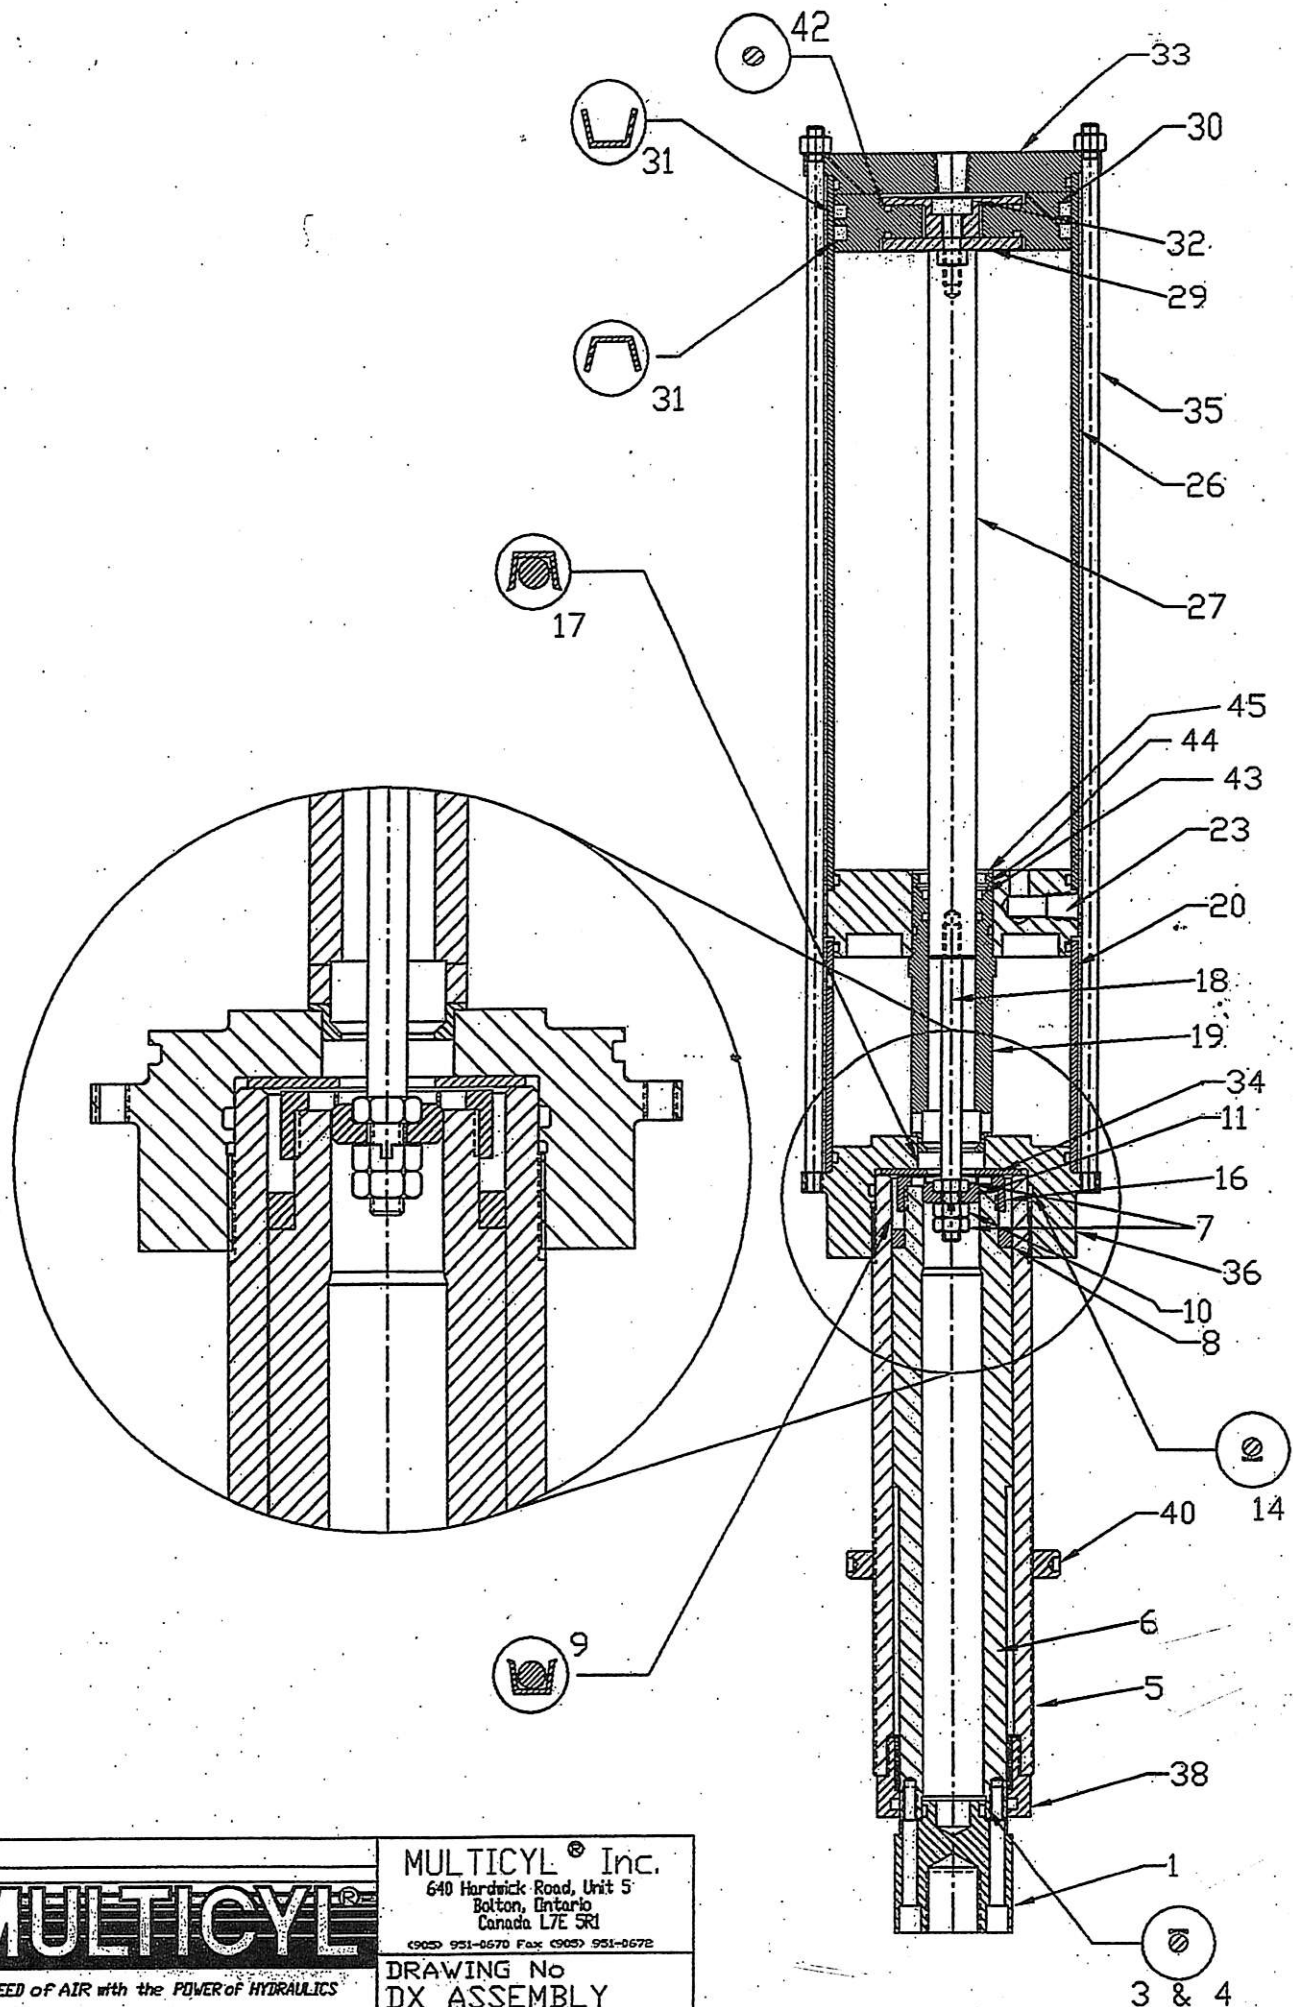

DX SPARE PARTS LIST					
		DX25-28-16		DX12-14-48	DX12-32-32
1	Female Connector	5786			
5	HP Cylinder	5940			
6	HP Piston	5938			
7	Lock Nut	X-0010			
10	Castillated Nut	X-0014			
11	LP Piston	5857			
16	HP Cap	5795			
18	Piston Rod Stud	5817	5838	5932	
19	Main Bearing	5760	5761		
20	Oil Cylinder Tube	5187			
23	Exhaust Divider	5753			
26	Air Cylinder Tube	5734			
27	Piston Rod	5741	5843	5931	
29	Retainer Disk	5757			
30	Air Piston	5754			
32	Air Piston Head	5756			
33	Air Cylinder Head	5281			
34	3rd Stage Seal Cover	5400	5401	5402	
35	Tie Rods	5769			
36	Main Body	5751	5752		
38	Ram Stop Sleeve w/Bushing	5941 w/ 32DU32			
40	Locking Ring	5454			